




Kuchenka elektryczna

MODEL: 740000, 740100

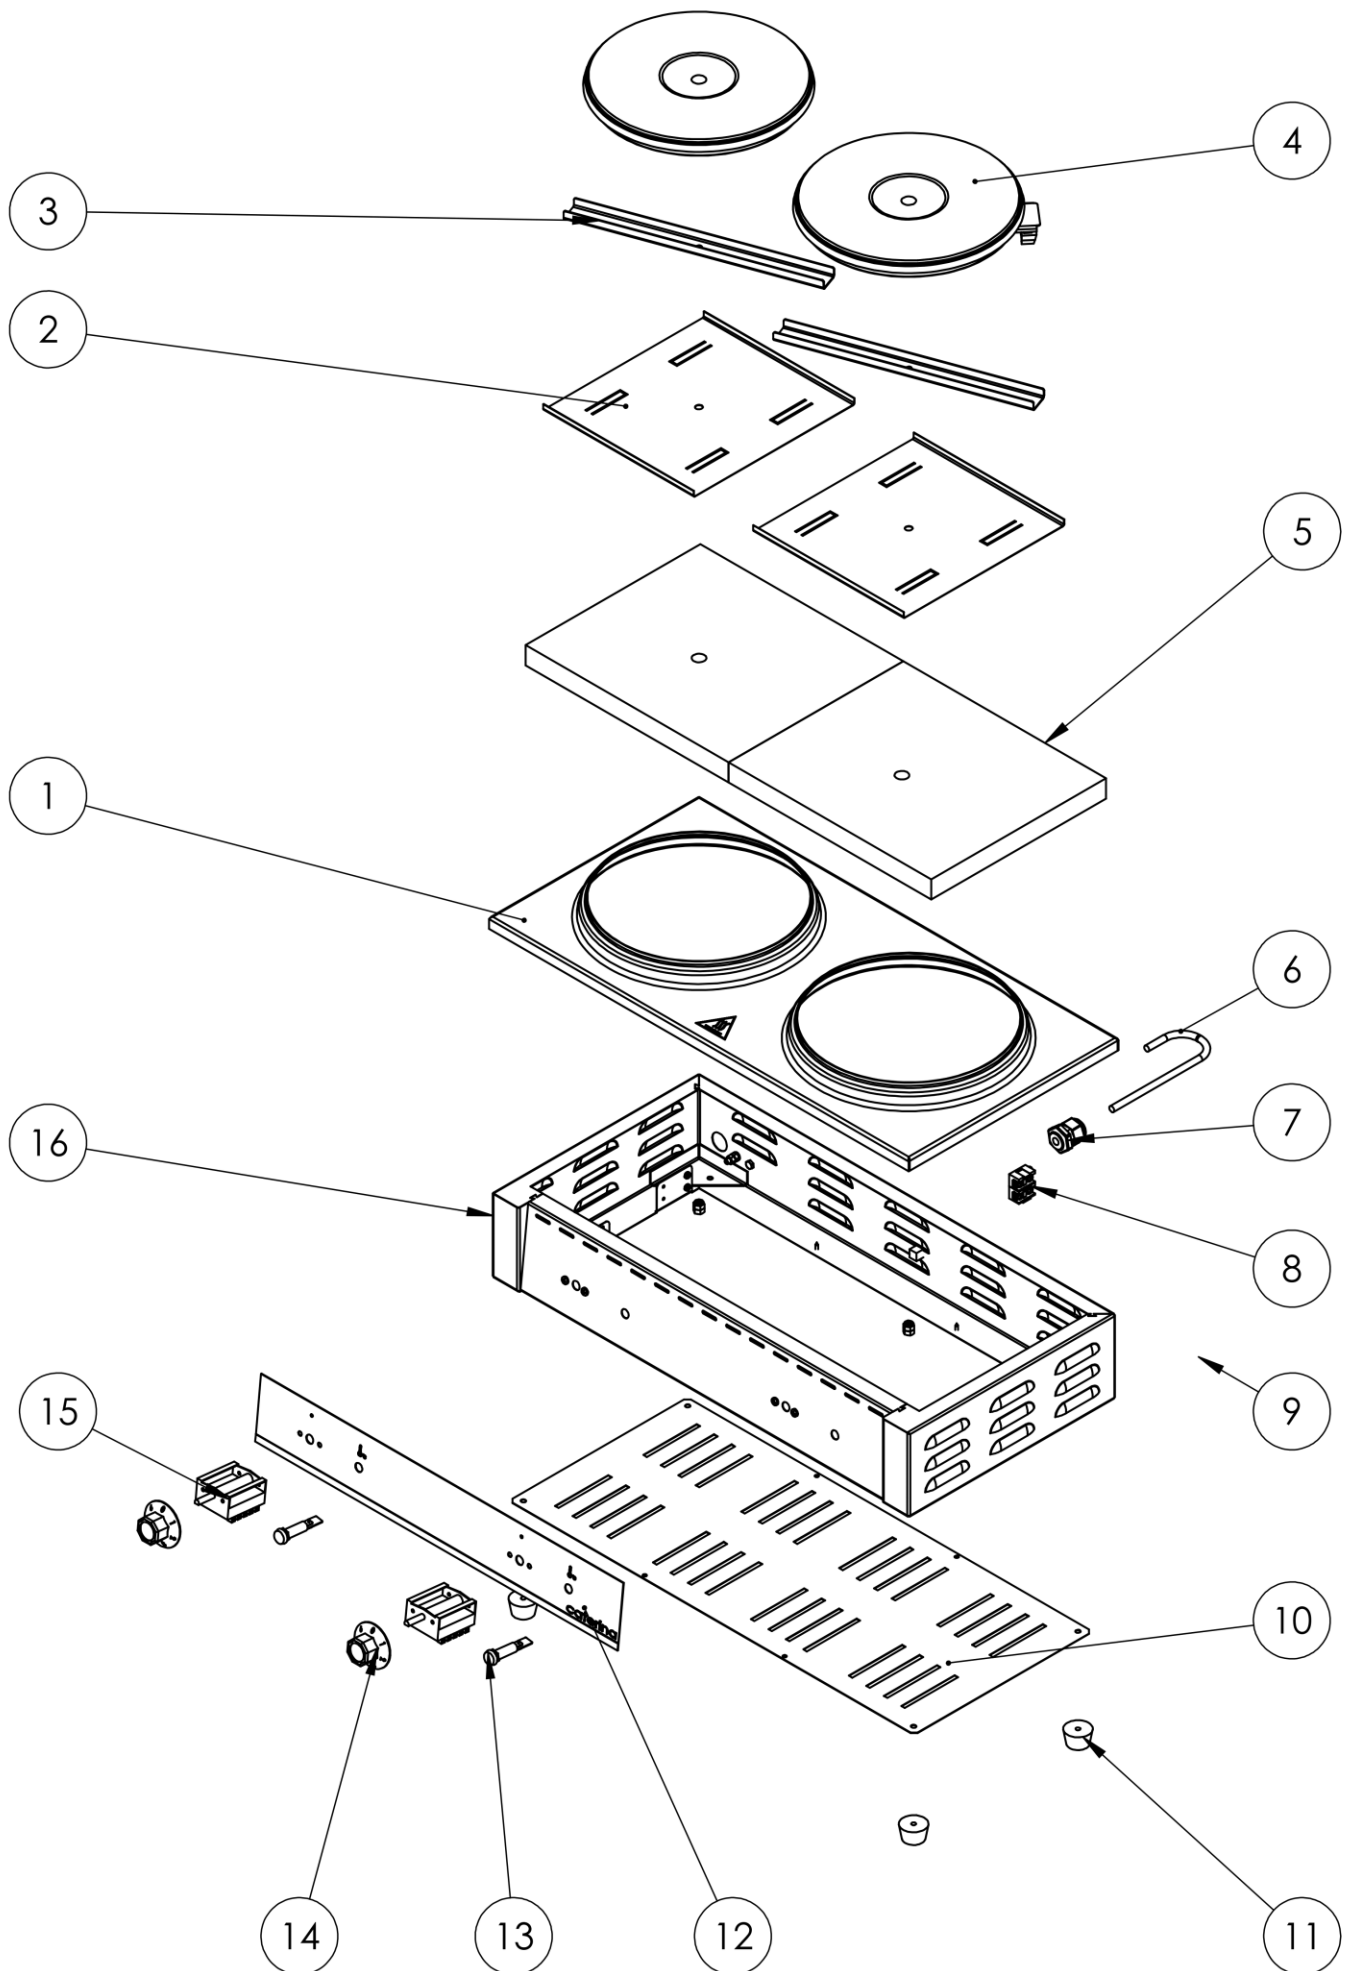



LP.	Numer katalogowy	Numer katalogowy	Nazwa części
1	V740000-01	V740100-01	Blat
2	V740000-02	V740100-02	Oslona
3	V740000-03	V740100-03	Uchwyt plyty grzewczej
4	V740000-04	V740100-04	Plyta grzejna fi220 2000W 230V
5	V740000-05	V740100-05	Mata izolacyjna
6	V740000-06	V740100-06	Przewod OW
7	V740000-07	V740100-07	Dlawica
8	V740000-08	V740100-08	Kostka przylaczeniowa 1-torowa
9	V740000-09	V740100-09	Instalacja elektryczna
10	V740000-10	V740100-10	Oslona dolna
11	V740000-11	V740100-11	Nozka gumowa
12	V740000-12	V740100-12	Etykieta
13	V740000-13	V740100-13	Lampka pomaranczowa
14	V740000-14	V740100-14	Pokretlo
15	V740000-15	V740100-15	Przetacznik
16	V740000-16	V740100-16	Korpus